Empowered by Innovation



UNIVERGE SV9100 Administrator Guide.

FOUR STAR NETWORK CO., LTD

NEC UNIVERGE SV9100 BASIC PROGRAMING



1.กด Start >เลื่อนหา NEC>SV9100 (เลือกโปรแกรมดังภาพตัวอย่าง)





2.เมื่อเปิดโปรแกรมแล้วจะแสดงหหน้าต่างดังภาพและให้ใส่ User Name &Password





3.เมื่อใส่ User Name&Password เรียบร้อยให้กด ปุ่ม OK





1.เลือกเมนู Connect.

File Home View Reports Filter options Too	Is		a 😻 About
Connect Communications	Image: Signature script Image: Signature script <t< td=""><td>Verify SD card copy on enance</td><td></td></t<>	Verify SD card copy on enance	
ystem Data 4 × Search 4	Connect Connection Account Save Save As Delete Estab syste	- C ×	
itter I 10-XX: System Configuration 11-XX: System Numbering Plan 11-XX: System Onling 14-XX: Tunk Setup 15-XX: Extension Setup 16-XX: Department Groups 20-XX: System Options 21-XX: Outgoing Call Service 22-XX: Incoming Call Service 23-XX: Answer Service 24-XX: Hold/Transfer Service 25-XX: VRS/DISA Service 25-XX: VRS/DISA Service 25-XX: VRS/DISA Service 30-XX: DSS/DLS Consoles 31-XX: External Speakers and 32-XX: Audio Communication Ir 32-XX: Audio Communication Ir 32-XX: Audio Communication Ir 32-XX: Tip Line Setur Expand All Collapse All St	Connection Type IP Image: I	his connection type if connecting e system via the LAN or internet. If the IP address of the system. P address specified should h the value of 10-12-01 on the m. If connecting to the ethernet on the VoIP daughter board, use P address of 10-12-09 instead. a Dial-up this connection type if connecting system via a dial-up connection sque modem. a Outbound this connection type if connecting e system via a outbound IP ection. Isten port number should match ralue of 90-69-01 on the system. the IP address of PC should h the value of 90-69-02 on the em.	set in File Properties set in File Properties .168.0.10 set in 90-01 rts Total .400 400 Extension Numbers Total 5596~5611 16 512 944 Firmware Main Software N/A DBMS N/A PCPro Server N/A CP10 Revision N/A BS10 N/A USB N/A
one		User: tech (IN) Site:	🐾 File Ver: SV9100 GE V9.0 Chassis Ver: 🖸

2.ใส่ IP Address ตู้สาขาโทรศัพท์ (Default =192.168.0.10) 3.ใส่ User Name & Password (Default User Name : **tech** Password:**12345678**



NEC

Connect

4. กดปุ่ม Connect.

File Home View Reports Filter options To	ols				🛆 🥙 About
Connect Download Upload Interactive Communications	Image: Sipple script Image: Script	e 🧭 Verify SD card copy ation intenance			
ystem Data $\Psi imes$	Connect	– 🗆 X			~
	Connection Account	tablish a connection to the remote			
itter	Connection Type IP IP/ISDN 192.168.0.10 IP via Dial-up Setup Th mathematical Setup	the system via the LAN or internet. ecify the IP address of the system. he IP address specified should atch the value of 10-12-01 on the	Not set in Fil Not set in Fil 192, 168,0, 1 Not set in 90	e Properties e Properties 0 -01	
	Listen Port Number 5y po O Outbound IP 8000 IP Us	stem. If connecting to the ethernet or ton the VoIP daughter board, use e IP address of 10-12-09 instead. via Dial-up se this connection type if connecting the supervised states and the supervised states of the supervised	Ports 1~400 ensions	Total 400	
21-XX: Outgoing Call Service	Login an	alogue modem.	Ports EX 897~912 55	ktension Numbers Tota 596~5611 16	4
22→XX: Indoming Call Service 23→XX: Answer Service 24→XX: Hold/Transfer Service 25→XX: VRS/DISA Service	User Name tech IP User Same tech User to	via Outbound this connection type if connecting the system via a outbound IP nnection.	961~1472 1~896, 913~960	512 944	
26-XX: Automatic Route Select 30-XX: DSS/DLS Consoles 31-XX: External Speakers and 32-XX: Doorphones and Sensc 33-XX: Audio Communication Ir 1 24-XX: Tie Line Setur X Expand All Collapse All St Expand All Collapse All	Connect Close	Intercont. I isten port number should match e value of 90-69-01 on the system. I the IP address of PC should atch the value of 90-69-02 on the stem.	9100 GE V9.0 Ma DB PC CP BS VM IPL US	mware N/A sin Software N/A MS N/A Pro Server N/A 10 Revision N/A 10 N/A 1 N/A L N/A B N/A	
one		User: tech (IN) Site:		File Ver: SV9100 GE V9.0	Chassis Ver: 🖸



Connect

5. สถานะการเชื่อมต่อสมบูรณ์.





- 1. คลิกเลือก Download
- 2. คลิกเลือก Start (ต้อง Download ทุกครั้งก่อนทำโปรแกรม)

🛄 🛃 🕶 🤚 🛉 📰 🗄	🛃 🗪 🤚 🛉 💷 Untitled [SV9100 GE V9.0] - PCPro						
File Repo	orts Filter options Tools						
4 1	🦕 🖤 🕑 🛟	J J	PC Pro accounts Connection accounts	Create SW file	Verify SD card copy		
Dis <u>c</u> onnect Download Uplose inter	ractive Cards Time Multi-	Run SIP setup	PC Pro Territory	R Feature activatio	n		
Communications	Programming	Scripts 🕞	Accounts	Mainte	nance		
System Data 🛛 📮 🗙	Download						
Search Q	Transfer Tune						
	System Data (A	1)		¥			
^	System Data List			-			
	Include Station Call Forward	d Data					
~	 ✓ Include System Speed Dials ✓ ✓ Include Station Speed Dials 			Downlo the rem	ad system data from note system to PCPro.	~	
				System	Data (All)		
Filter				Downlo (ie Blad PRG's).	ad all the system data. le configuration and all		
+ 10-XX: System Configuration				System	Data Partial (System		
+ 12-XX: Night Mode Service				Wide)	ad page part based		
13-XX: Speed Dialing				data. Y	ou can specify what		Dat
14-XX: Trunk Setup				system	data to Download.		
+ 15-XX: Extension Setup + 16-XX: Department Groups				Blade C	Configuration Data	1	
+ 20-XX: System Options			✓ Select All	Downlo	ad only blade		& E
21-XX: Outgoing Call Service	Select All			configu	ration data.		
+ 22-XX: Incoming Call Service	_			System (Teleph	Data Partial		
+ 24-XX: Hold/Transfer Service		- 10	2	Downlo	ad telephone based	- 1	
+ 25-XX: VRS/DISA Service			2	data. Y	ou can specify which nd which PRG's.	\sim	
+ 26-XX: Automatic Route Select		Start	Close	(ea 15-	01, 20-06 etc)		tion
1 31-XX: External Speakers and							



3.เมื่อ Download เรียบร้อยแล้ว คลิกปุ่ม Close



Disconnect

NEC Empowered by Innovation

1.กดปุ่ม Disconnect





System Clock

Empowered by Innovation

1.กดปุ่ม Time Setting 2.ตั้งวัน เวลา ปี จาก System Time Setting แล้วกด OK.



Station Assign

1.กดเลือกเมนู system Data 2.กดเลือก โปรแกรม 11-02 Extension Numbering





Station Assign

3.กดพอร์ท การ์ดที่ต้องการ 4.เลือกเบอร์ที่ต้องการ เมื่อตั้งเบอร์เรียบร้อยให้กด Apply.





้ข้อควรรู้ก่อนโปรแกรม 1.หมายเลข IP Phone นั้น จะใช้พอร์ทที่ไม่มีการ์ดจริง



ที่ชีดเส้นใต้คือพอร์ที่มีการ์ดจริง NEC SV9100 นั้นมีพอร์ท 1-896 พอร์ท ฉนั้นพอร์ที่ใช้สำหรับ IP Phone ได้คือ พอร์ท 57-896

TIP. Check หน้าการ์ดด้วยการ กดดูตรงเมนู Card



1.โปรแกรม 11-02 กำหนดเบอร์ตรงพอร์ทที่ต้องการ 2.เรียบร้อยให้กด Apply.

Dis <u>c</u> onnect Download Upload Interac Communications	ttive Cards Time Multi- setting assign Script Script Programming Script.	PC Pro accounts Create SW file Verify Connection accounts Q Upgrade SW SD card cop PC Pro Territory Reature activation Maintenance	9y	2
System Data # ×	System Data			Grid Viev Apply Cancel
Filter D D D	Station Port	Extension	Station Port	Station Port (1~960) 57 Q
□ 11-XX: System Numbering Plan ▲ □ 11-01: System Numbering	057		065	386
11-02: Extension Numberin 11-04: Virtual Extension Nu 11-06: ACI Extension Numt 11-06: ACI Extension Numt	058	312	066	387
IIII/: Department Group F III/08: ACI Group Pilot Nun			2/2	







7.เลือกโปรแกรม 15-05
8.เลือกเบอร์ที่ต้องการ
9.กำหนดค่าให้เป็น Enable
10.กดปุ่ม Apply.

System Data 7 × Search 9	System Data		⊡ 🎴 🗘 ★ Grid View Apply Cancel Defau
^	15-05: IP Phone Basic Setup	7	8 Extension 568 TP - 197 168 4 54 - Part 723
×	01 - Terminal Type	SIP 🗸	
Filter	02 - Terminal MAC Address	00-00-00-00-00	
···· 15-01: Extension Basic Set ···· 15-02: Multi-Line Telephon ···· 15-03: Single Line Telepho	04 - Nickname		
	09 - Call Procedure Port	5060	ขั้นตอนต่อจากนี้คือการ
	11 - DT800/DT700 C/CTR Port	0	ลงทะเบียน IP Phone
····· 15-11: Virtual Extension De ····· 15-12: Conversation Recor ····· 15-13: Loop Keys	15 - Codec Type	Type 1 V	เครื่องโทรศัพท์
	16 - Authentication Password 18 - IP duplication allow mode	Enable Q	
⊡ 15-18: Virtual Extension Ke			





ข้อควรคู้ก่อนการโปรแกรมระบบ

ระดับการโทรนั้นสามารถแบ่งได้ทั้งหมดระดับดังนี้ ระดับ 1 ต่างประเทศ ระดับ 2 ต่างจังหวัด ระดับ 3 มือถือ ระดับ 4 พื้นที่ ระดับ 5 ฉุกเฉิน 191.199.1669 ระดับ 6 ภายในบริษัท



Toll Restriction Class

1.โปรแกรม 21-04
 2.เลือกเบอร์ที่ต้องการตั้งค่า
 3.ป้อนค่าที่ต้องการตั้ง
 4.กดปุ่ม Apply.

System Data 7 × Search 4	System	Data						III Grid Vie	Apply Can	cel Default Copy
4	21-04: To	oll Restriction Cla	ss for Extensio	ons 1		Night Mode	ICM Extension 323: ML	.T - FRONT A - Port 001	1 - Chassis 1 - Slot 02	(2) × 2)
Filter	ICM Extension	Mode 1	Mode 2	Mode 3	Mode 4	Mode 5	Mode 6	Mode 7	Mode 8	Power Failure Mode
 21-XX: Outgoing Call Service 21-01: Outgoing Calls Syste 21-02: Trunk Group Routin 	323	2	2	2	2 3	2	2	2	2	2
21-03: Trunk Group Routin	110	2	2	2	2	2	2	2	2	2
21-05: Ioll Restriction Clas 21-06-01: Toll Restriction - 21-06-02: Toll Restriction -	111	2	2	2	2	2	2	2	2	2
21-06-03: Toll Restriction -	120	2	2	2	2	2	2	2	2	2
21-06-05: Toll Restriction -	221									



Call Pickup Group

1.โปรแกรม 23-02
 2.เลือกเบอร์ที่ต้องการตั้งค่า
 3.ป้อนค่าที่ต้องการตั้ง
 4.กดปุ่ม Apply.

System Data $\Psi imes$ Search Q	Sy	stem Data				Grid View Apply	🛟 🔆 🗎 Cancel Default Copy
<u>`</u>	23	-02: Call Pickup Groups			ICM Extension	323: MLT - FRONT A - Port 001 - Chassis 1 - 1	Slot 02 (2) V
Filter 🔽 🗖 🗖 🗖		ICM Extension	Call Pickup Group	Priority Order	ICM Extension	Call Pickup Group	Priority Order
21-XX: Outgoing Call Service		323	2		131	3	9
22-XX: Incoming Call Service 23-XX: Answer Service 23-2X: Call Pickup Groups		110	3	2	130	3	10
23-03: Ringing Line Prefere 23-04: Ringing Line Prefere		111	3	3	218	5	11
24-XX: Hold/Transfer Service 25-XX: VRS/DISA Service		120	2	4	216	5	12
26-XX: Automatic Route Select 30-XX: DSS/DLS Consoles		221	2	5	232	5	13

กำหนดค่าเบอร์ที่ต้องการให้อยู่กลุ่มเดียวกัน



Direct Inward Dialing.(normal)

1.โปรแกรม 22-02
 2.เลือกสายนอกที่ต้องการตั้งค่า
 3.ป้อนค่าเป็น Normal
 4.กดปุ่ม Apply.





Direct Inward Dialing.(normal)

8

5.โปรแกรม 22-05
6.เลือกสายนอกที่ต้องการตั้งค่า
7.ป้อนค่า กลุ่มที่ต้องการให้ดัง อ้างอิง 22-04
8.กดปุ่ม Apply.

	_									
System Data 7 × Search Q	S	System Da	ita					Crid 1		🗶 🗈
	2	22-05: Incor	ning Trunk Ring Gr	oup Assignmen	t 5	Night Mode		Trunk 00:	L: CO - Chassis 1 - Slot 05	
Filter		Trunk	Mode 1	Mode 2	Mode 3	Mode 4	Mode 5	Mode 6	Mode 7	Mode 8
22-XX: Incoming Call Service 22-01: Incoming Call System 22-01: Call System		001	1	1	1	1	1	1	1	1
22-02: Incoming Call Trunk		002	1	1	1	1	1	1	1	1
22-05: Incoming Trunk Rin 22-06: Normal Incoming Rin		003	1	1	1	1	1	1	1	1
22-07: DIL Assignment		004	1	1	1	1	1	1	1	1



Direct Inward Dialing.(normal)





Trunk Make Busy.

Empowered by Innovation

1.โปรแกรม 14-01-07
 2.เลือกสายนอกที่ต้องการตั้งค่า
 3.เอาเครื่องหมายถูกออก ตรงสายนอกที่ไม่ใช้งาน
 4.กดปุ่ม Apply.

System Data 🛛 🕂 🗙	System Data			
Search Q	System Data			Grid View Apply Cancel Default
	14-01: Trunk Basic Setup		2	Trunk 001: CO - Chassis 1 - Slot 05 (5) 🗸 🖣
	01 - Trunk Name	Line 001		
Filter 🔽 🖬 🗾				
12-XX: Night Mode Service 13-XX: Speed Dialing 14-XX: Trunk Setup	02 - Transmit Gain Level	-15.5dB 0.0dB (32) 12.5dB		
14-01: Trunk Basic Setup 14-02: Analog Trunk Setup 14-04: Behind PBX Setup 14-05: Trunk Groups	03 - Receive Gain Level	-15.5dB 0.0dB (32) 12.5dB		
	04 - Conference and Transfer Calls Transmit Gain Level	-15.5dB 0.0dB (32) 12.5dB		
	05 - Conference and Transfer Calls Receive Gain Level	-15.5dB -8.0dB (16) 12.5dB		
 14-15: ISDN Trunk Call For 14-18: IP Trunk Data Setur 	06 - SMDR Print-out			
the Horizon Setup the Horizon Setup the Horizon Setup v v v v v	07 - Outgoing Calls			
Expand All Collapse All	08 - Toll Restriction			



Empowered by Innovation



